



www.aquatecequipment.com

IMPORTANT SAFEGUARDS

To guard against injury, basic safety precautions should be observed including, but not limited to the following;

- The AC adaptor is under no circumstances intended to be placed in the pond or water feature. It must therefore be located within three meters of the pond or water feature, in a suitably dry and protected position. It should be out of direct sunlight and preferably mounted at least 30cm above ground level.
- Do not operate the light if the light or any components of the light, such as the cord, have been damaged in any way.
- Always use a properly grounded power supply that is connected to an RCD of less than 30mA. As per AS/NZS 3350.2.41:1997.
- Always unplug the light from the power supply when not in use or before performing any maintenance on the light. Never pull the cord to disconnect the plug from the power supply. Grasp the plug and pull to disconnect.
- Do not cut the cord as this will result in voiding your warranty.
- Care should be taken to arrange the power cord so that it cannot be accidentally tripped over or pulled.
- Do not attempt to repair the light yourself. Return to an authorized service centre or place of purchase if a fault occurs.
- Do not use in water above 35°C.
- Do not attempt to use this AC adaptor on any other device without first verifying with Aquatec.

LIMITED WARRANTY

- Warranty covers only appliance defects and faulty material and workmanship within a 2 year period.
- Faults arising due to; accidents, misuse, not following manufacturer's guidelines/ instructions, or power surges/spikes/ brownouts will not be covered.
- Warranty will be void if any tampering, removal of warranty labels, or electrical circuitry is evident.
- Loss of livestock, damage to property, or personal injury caused by this product will not be covered.
- Warranty will be void if power cord is cut or damaged in any way.
- Warranty claims caused by installation faults will not be covered.
- It is the customer's responsibility to return the faulty appliance for any warranty claim, to Aquatec.
- For any warranty to be valid, an original proof of purchase must be provided.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



18 LED POND/GARDEN LIGHT INSTRUCTIONS MANUAL



Manufactured for

AQUATEC
EQUIPMENT

PO Box 2087, Seville Grove WA 6112

Telephone (08) 6260 1000

Email info@aquatecequipment.com

www.aquatecequipment.com

Note: Please consult your retailer for quality original AquaPro replacement parts for your AquaPro product. Visit www.aquatecequipment.com for nearest stockists.



18 LED POND/GARDEN LIGHT

INSTRUCTIONS MANUAL

Congratulations on your purchase of this product by AquaPro, the answers for your watergarden made easy!

18LED POND/GARDEN LIGHT	
VOLTAGE (V)	12V
POWER (Watts)	2.4W
CABLE LENGTH (m)	10m

DESCRIPTION AND FEATURES

Your AquaPro LED pond light has been manufactured with advanced technology to provide you with the best quality lighting accessory for your pond.

- The AquaPro LED light has a glass lens and is suitable for use in or out of water.
- The AC adaptor converts the power supply to a safe 12volt for peace of mind in your garden.
- The 18 LED light comes with a mode switch to control the colours.
- Kit includes base or garden stake for installation in the garden or pond.

INSTALLATION

1. If required, have a qualified electrician install a weatherproof power point near to the pond, (within 10 meters so the light cable will reach the AC adaptor).
2. Mount the AC adaptor in a dry and protected location making sure that it cannot be wet by either rain or reticulation.
3. Connect the light to either the weighted base or the garden spike and place in desired location. If using in water, attach the weighted base and if using in the garden, attach the spike. Place the light in desired location and plug into the AC adaptor, taking care not to wet the plug.
4. Adjust the light until facing in the general direction of the feature you wish to illuminate. Final adjustments should be carried out at night.
5. Connect the light lead to the AC adaptor and turn on the power.
6. To turn on or turn off the light press function control button for 3 seconds
7. The light has 2 auto-changing modes and can be used in single colour mode. The default mode is auto fading between the 7 colours.
8. Repeatedly press the Function Control Button to change between modes. Mode sequence is as follows:
 - 7 colours fading
 - 7 colours jumping
 - 8 single colours (red, green, blue, yellow, purple, cyan, white & orange)

MAINTENANCE

There is minimal maintenance required on the LED pond lights. The light should be inspected on a regular basis to ensure the light or cable is not damaged in any way.

The light should be cleaned regularly to ensure maximum efficiency.

